

ECOSTEP Glass Cleaner

For everyday cleaning of glass, mirrors and compatible smooth surfaces

Product Overview

ECOSTEP Glass Cleaner is a ready-to-use spray cleaner shown for use on glass and mirror surfaces, appliances, kitchen cabinets and ceramic surfaces. It is designed for convenient spray-and-wipe cleaning and a clear, polished finish.



4 Application Areas



Windows & Glass Doors

For routine cleaning of windows and other glass surfaces.



Mirrors

Helps keep mirrors clear and visually clean.



Glass Kitchen Cabinets

Suitable for glass-front cabinets and similar glass panels.



Glass Cooktops & Appliance Panels

Useful for compatible glass appliance doors, panels and cooktops.

How to Use

Simple 5-step cleaning routine

1 Shake the Bottle


Shake the bottle well before use.

2 Spray the Surface


Spray a small quantity onto the glass surface.

3 Wipe Clean


Wipe evenly using a clean, soft cloth.

4 Polish


Polish the surface gently for a better shine.

5 Finish


Buff lightly to leave the surface clean and streak-free.

Suitable Surfaces

- Windows and glass doors
- Mirrors and glass partitions
- Glass-front kitchen cabinets
- Glass appliance doors, panels and compatible cooktops

Quick Use Guide

- Use a clean, soft or lint-free cloth for wiping.
- Spray a small amount rather than soaking the surface.
- Wipe and polish until the surface looks clear and streak-free.
- For best presentation, finish with a dry section of the cloth.