



LATAFIX 305 Cue Card

LATAFIX 305 Floor & Wall Tile Adhesive



Key Benefits for Contractors & Customers

- Economical & easy to use for Ceramic Tiles
- Heavy traffic allowed after 16-24 hours (At 21 degree Celsius)



Application Areas

- Living Rooms - Dry Areas Floor & Wall



Suitable Substrates

- Concrete
- Concrete Masonry
- Brick Masonry
- Cement Terrazzo

Suitable Finishes

- Ceramic Tiles
- Small Format Natural Stones



Best Practices of Tile & Stone Installations with Thin-set Adhesives



SURFACE PREPARATION

Ensure the surface is cleaned and in the surface saturated dry state. Dust particles lead to improper adhesion and thereby cause debonding.

White wax / powder from the back of the tile needs to be completely removed for the best adhesion with adhesive.



UNIFORM MIXING & SLAKING

Uniform mixing of thin-set adhesives with water/admix, followed by slaking, greatly enhances the tile coverage and helps with better workability for the mason.

*Don't mix Cement with Adhesive




STRAIGHT NOTCHING

Provide notching using the trowel in straight lines, to avoid air-gaps and ensure uniform & complete thin-set coverage.



BACK BUTTERING

Back buttering of the thin-set adhesive is critical in providing high coverage. Higher the coverage, better is the quality of the tile/stone installation.

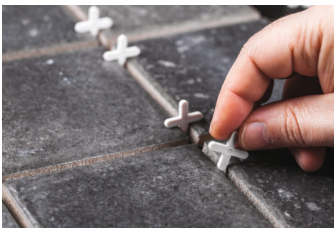

USE SPACERS

Use spacers to provide tile joints. Tile joints help with the expansion & contraction of tile/stone without affecting the aesthetics.